

Tinley Tack COS Instructions

Specification for Software V1.05


Supply Voltage
9-16Volts

Supply Current
<50mA

Load Equivalency Number
LEN 1

Supported PGN's

59392 ISO Acknowledgement
600928 ISO Address Claim
126208 Acknowledge Group Function
126996 Product Information
128259 Boat Speed
128267 Depth
130306 Wind Data (AWA Only)
127257 Heel output +/- 10 degrees

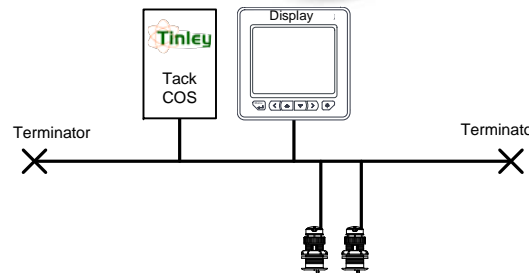

It is possible to connect more than one Tack COS to a system when using separate Speed and Depth sensors for instance. However, special consideration is required. Only one Tack COS should be connected at a time during initial setting up. Only after each Tack COS has been fully set up can both be connected simultaneously. Should two units be connected accidentally before setting up then you must reset both units and start again.

Installation

The unit must be mounted on a forward facing bulkhead with the label mounted upright and at the top of the unit. If you look forward you should see the label. Align the unit upright as accurately as possible.

Operation

The unit will use its own internal heel sensor unless Apparent Wind is available on the bus. Apparent wind is always used in preference. If the Wind data fails, the internal sensor will take over after 10 seconds.

Setup

The Tack COS set up is automatic, but so that the unit knows which sensor is which, the system must be powered with only the Port sensor connected and the Starboard sensor disconnected on first power up. After a few seconds of power up the Starboard sensor may then be connected. The Tack COS will now remember the unique sensor identification of each sensor. If for any reason the sensors are changed or moved, the Tack COS will require a reset. After calibrating the sensors if necessary, select 'Tinley COS' as the 'preferred source' on the system displays. (See system manual)

Reset

There is a reset button under the lid of the unit on the bottom right. To reset the unit, disconnect the Starboard sensor before powering up the system with the reset button held down. After a few seconds, release the reset button and then reconnect the Starboard sensor.

Calibration

Some systems send calibration data to be stored in the sensor. In these systems both sensors will need to be calibrated independently. Using a system display, select each sensor as the 'source' in turn and calibrate that sensor for Speed and/or Depth according to the system manual. When both sensors have been calibrated, select 'Tinley COS' as the 'source' for both Speed and Depth. Note that to help identify each sensor, it often helps to disconnect the sensor/s not being calibrated.

Heel Output

Heel angle is output as either 10° (port tack/stbd sensor) or -10° (stbd tack/port sensor). This can be used to check for correct operation of internal switch and/or Wind input.

Tinley Electronics Ltd.
235 Bentley Way,
Lymington, SO41 8JW.
England

© Tinley Electronics Ltd. 2013
This drawing may not be copied or reproduced in any form or by any means without the prior written consent of Tinley Electronics Ltd.

Tel: +44 (0) 1590 610071
Fax: +44 (0) 1590 610072
e-mail: electronics@tinley.net
Website: www.tinleyelectronics.com